

MONTAGEANLEITUNG BLENDRAHMEN









ASSEMBLY INSTRUCTIONS TIMBER FRAME

NOTICE DE MONTAGE CADRE BLOC

MONTAGEANLEITUNG BLENDRAHMEN

ASSEMBLY INSTRUCTIONS TIMBER FRAME








NOTICE DE MONTAGE CADRE BLOC

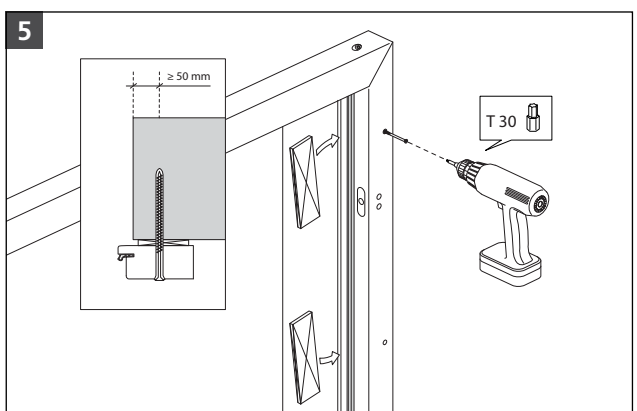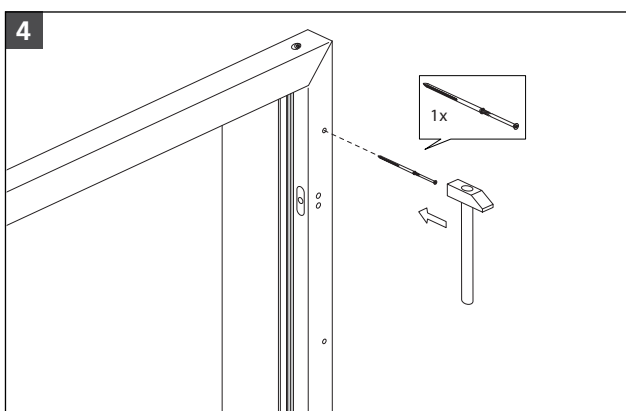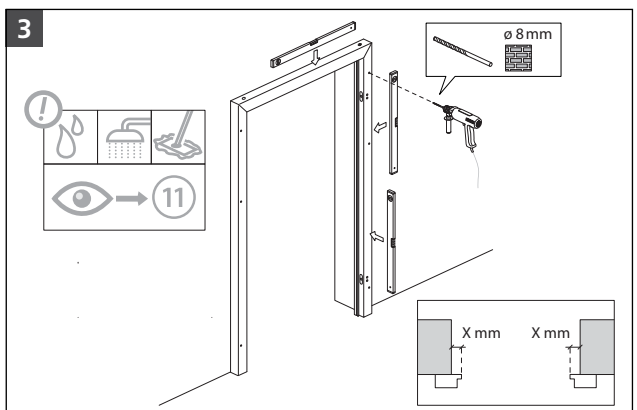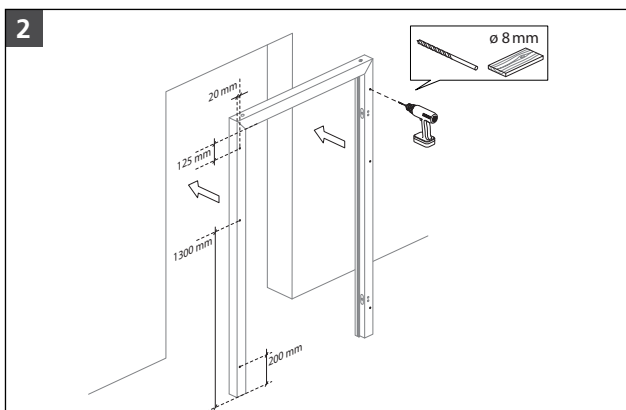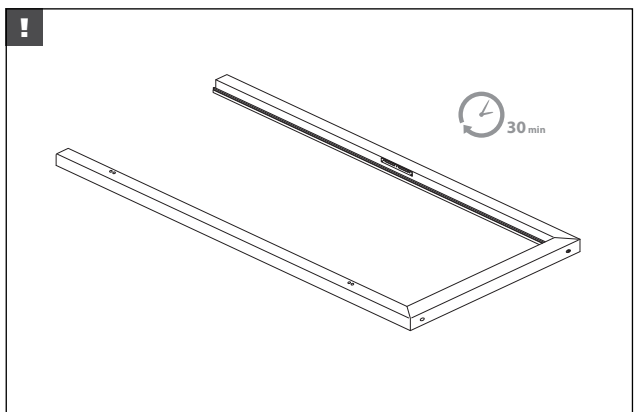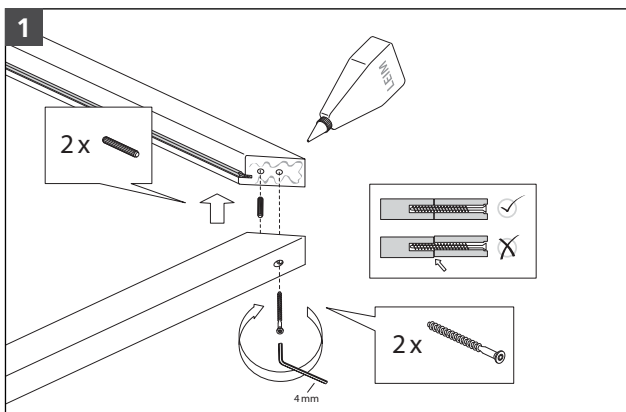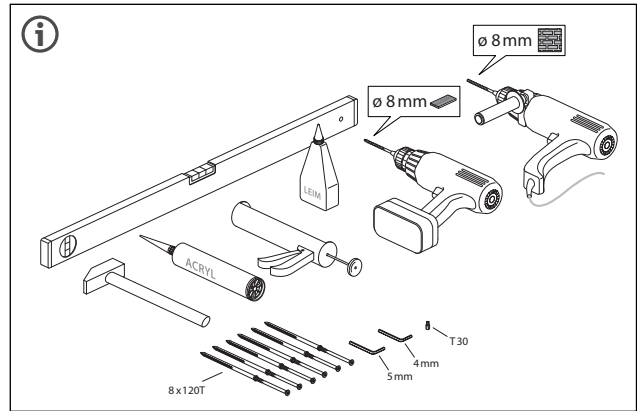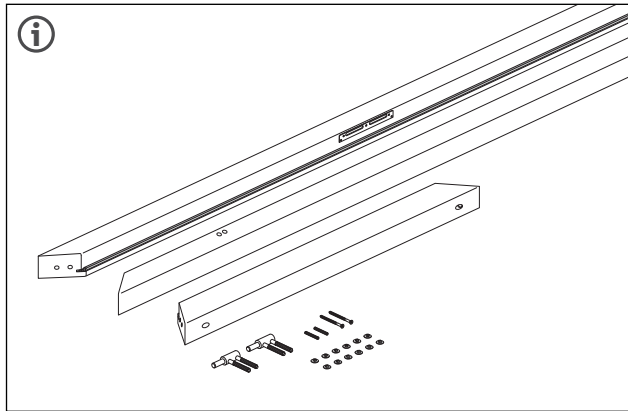

MONTAGEANLEITUNG BLENDRAHMEN

ASSEMBLY INSTRUCTIONS TIMBER FRAME

NOTICE DE MONTAGE CADRE BLOC

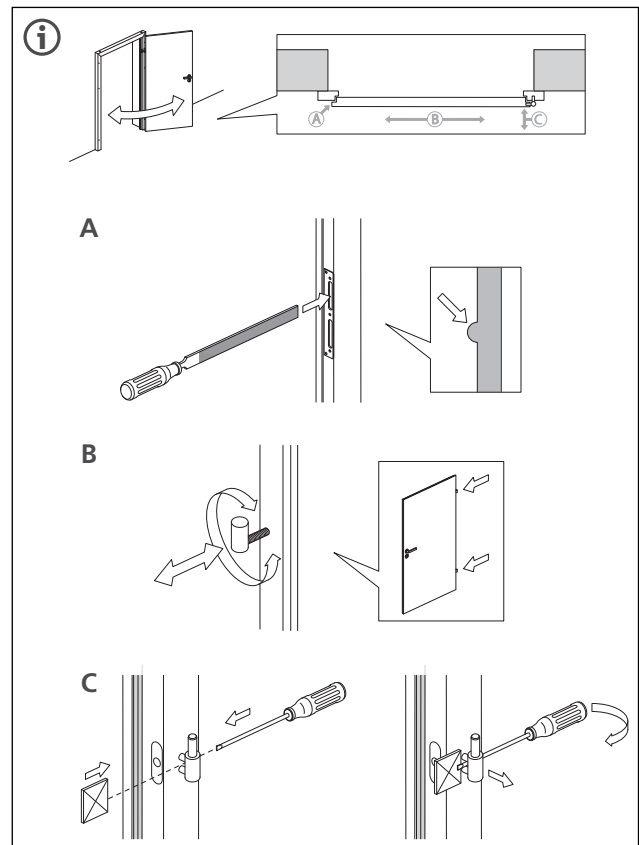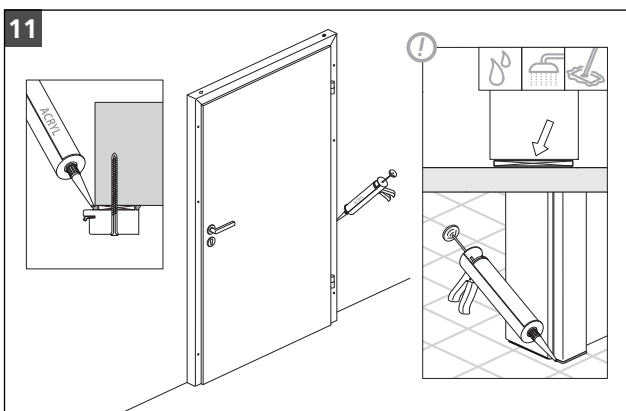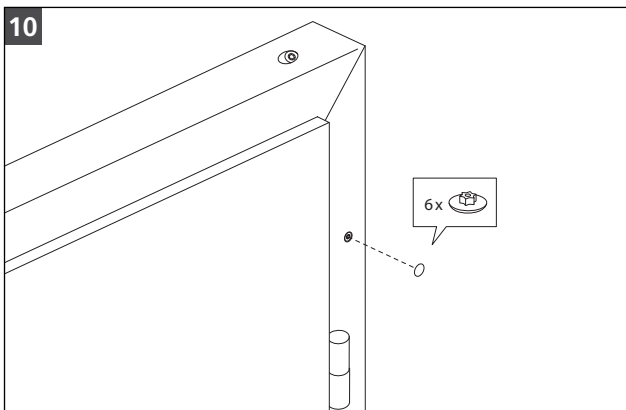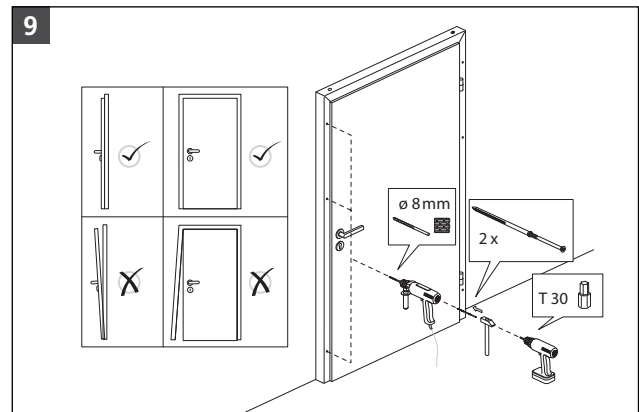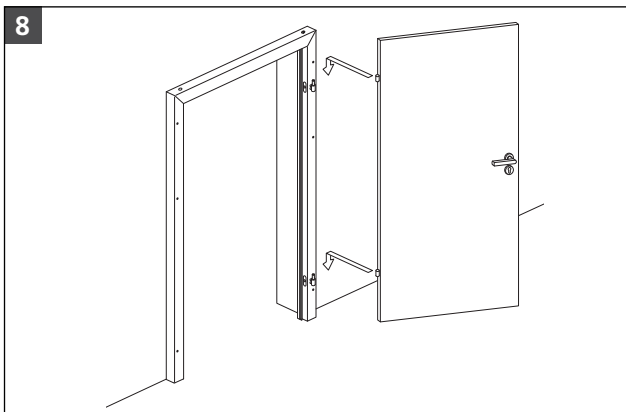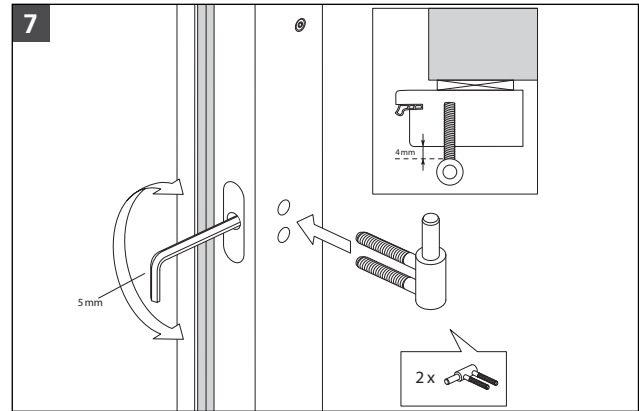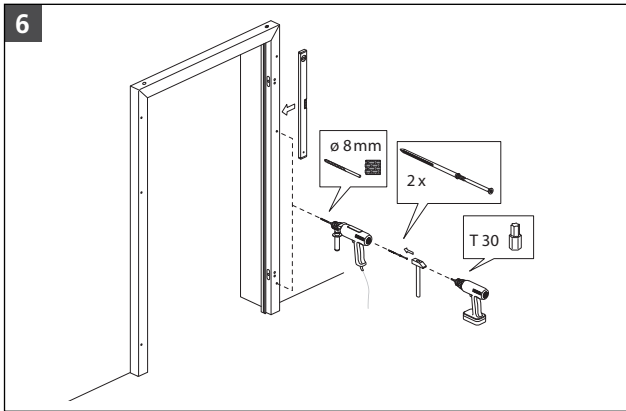

-  Sperrholz/Schalung
-  Türen/Zargen
-  Laminate/Elemente

Westag & Getalit AG

Postfach 26 29 | 33375 Rheda-Wiedenbrück | Germany
Tel. +49 5242 17-2000 | Fax +49 5242 17-72000
www.westag-getalit.de | werbung@westag-getalit.de